



Check/edit the image

→ Select OK and press Enter

Rotate the image by 180°

Scan the back of the card

Change the date added

Select the index (A, B, ...) and press [nter]

For example, select "K" for "KING JIM".







Quick Guide

5 Select the group in the index and press Enter



This screen will appear when there are groups added to the index.





the group and press Enter



Select the destination in

This screen will appear when there are cards added to the group.





For information about how to find a card,


see the back side

Select the destination in your favorites and press Enter



This screen will appear when there are cards added to your favorites.

* The cards added to your favorites can be searched in "Favorite mode".

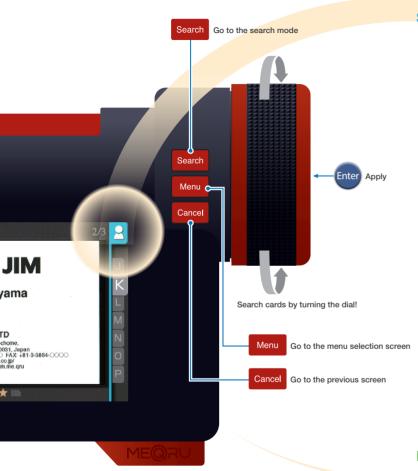

Scroll mode



Search all the cards

Five search modes and how to find a card



Group mode



Select the group

* Only the first card of each group is displayed



Search cards in the group

Index mode



Select the index (A, B, ...)



Select the group



Search cards in the group

Favorite mode



Search only cards added to your favorites

Registration date mode



Search all the cards in the order of the registration date